

# 2-9120 /2-9130 Color Series



## Telephone User's Guide

2-9120 2-9130

2-9121 2-9131

2-9122 2-9133

2-9123 2-9134

2-9124 2-9136

2-9126 2-9137

2-9127

**We bring good things to life.**

FOLD

### FCC REGISTRATION INFORMATION

Your GE telephone equipment is registered with the Federal Communications Commission and is in compliance with parts 15 and 68, FCC Rules and Regulations.

#### 1. Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the FCC Registration number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

#### Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.


#### 2. Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.


### MODULAR JACK REQUIREMENTS

You need an RJ11 (CA11) type modular jack, which is the most common type of phone jack and might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one installed.

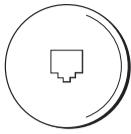

### INSTALLATION


#### DESKTOP OR TABLETOP INSTALLATION

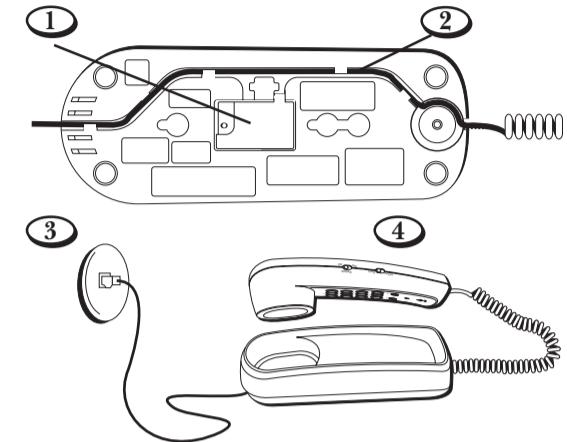


- Remove telephone line cord from the pocket on the bottom of the phone.
- Run telephone line cord through the guides on the bottom of the phone.
- Connect the telephone line cord to a modular telephone jack.
- Slide the RINGER switch (on the side of the handset) to ON.
- Set PULSE/TONE switch (on the side of the handset) to TONE for touch-tone service, or set it to PULSE for rotary service. If you don't know which type of service you have, check with the phone company.

### WALL MOUNT INSTALLATION

1a. If the modular phone jack is in the base plate on the wall where you're going to mount your phone, just plug the telephone line cord into the jack; mount the phone on the posts; and set the RINGER switch and PULSE/TONE switch (described in detail below).

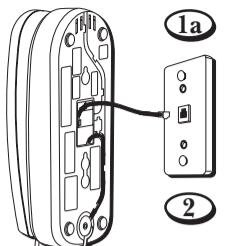


1b. If the modular phone jack is near the floor and you want to mount the phone on the wall, remove the telephone line cord from the pocket that is on the bottom of the phone. Unscrew the circular cord cover on the bottom of the phone with a Philips screwdriver. Wrap the phone cord around the circular guide and screw the circular cord cover in place.

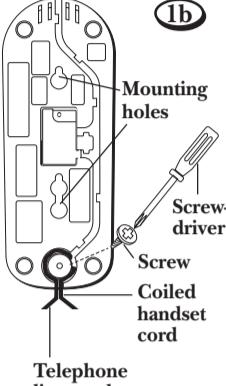

2. Plug telephone line cord into the modular jack.

3. Slip mounting holes on the bottom of the telephone over the wall plate posts and slide the base down until the phone is firmly in place. (Wall plate is not included.)

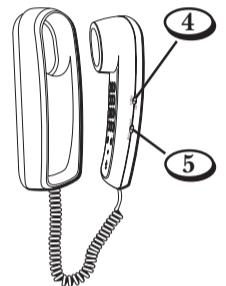

4. Slide the RINGER switch (on the side of the handset) to ON.

5. Set PULSE/TONE switch (on the side of the handset) to TONE for touch-tone service, or set it to PULSE for rotary service. If you don't know which type of service you have, check with the phone company.

### INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.
- Consult the dealer or an experienced radio/TV technician for help. If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

### HEARING AID COMPATIBILITY

This telephone system meets FCC standards for Hearing Aid Compatibility.

FCC NUMBER IS LOCATED ON THE CABINET BOTTOM  
REN NUMBER IS LOCATED ON THE CABINET BOTTOM

### USING THE TELEPHONE FEATURES

#### AUTOMATIC REDIAL

To automatically redial the last number you called:

- Pick up the handset to get a dial tone.
- Press REDIAL.

#### FLASH

Press the FLASH button instead of the hook switch to activate custom calling services such as call waiting or call transfer. Custom calling services are provided by the phone company.

#### TEMPORARY TONE

If you have pulse service, you can temporarily change from pulse to tone service in order to access services that require tone dialing (such as getting information from a local bank). After dialing the telephone number, press and release the tone button, marked with an asterisk (\*). When you hang up, your phone returns to pulse service.



### TROUBLESHOOTING TIPS

Problem	Solution
No dial tone.	<ul style="list-style-type: none"> <li>Check hook switch to make sure it pops up.</li> </ul>
Won't dial out	<ul style="list-style-type: none"> <li>Make sure PULSE/TONE is set to correct position.</li> </ul>
Phone doesn't ring	<ul style="list-style-type: none"> <li>Make sure RINGER switch is set to ON.</li> <li>You might have too many phones on one line.</li> </ul>
Feedback when dialing in PULSE mode.	<ul style="list-style-type: none"> <li>This is normal. Power fluctuates with phone outputting.</li> </ul>
Can't be heard by other party	<ul style="list-style-type: none"> <li>Make sure phone cord is securely plugged in.</li> <li>Make sure other phones aren't off the hook at the same time you're using the phone. It is normal for the volume to drop when additional phones are used at the same time.</li> </ul>

### THOMSON CONSUMER ELECTRONICS

© 1998 Thomson Consumer Electronics, Inc. 2-9120/21/22/23/24/26/27  
P.O. BOX 1976, Indianapolis, IN 46206 2-9130/31/33/34/36/37  
Trademark(s) ® Registered 20909690 (Rev. 2 E/S)  
Marca(s) ® Registrada(s) 98-08

Printed in Philippines

### LIMITED WARRANTY

#### What your warranty covers:

- Any defect in materials or workmanship.

#### For how long after your purchase:

- One year. (The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

#### What we will do:

- Provide you with a new or, at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

#### How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to:
 

Thomson Consumer Electronics, Inc.  
Product Exchange Center  
32 Spur Drive  
El Paso, Texas 79906
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment in case of loss or damage. Thomson accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you prepaid freight.

#### What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

#### Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

#### How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

#### If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

# 2-9120 / 2-9130 Series de Color



## Teléfono Guía del Usuario

2-9120	2-9130
2-9121	2-9131
2-9122	2-9133
2-9123	2-9134
2-9124	2-9136
2-9126	2-9137
2-9127	

Creamos cosas buenas para la vida.

## INFORMACIÓN DE LA REGISTRACIÓN DE LA FCC

Este equipo telefónico de la GE ha sido registrado con la Comisión Federal de Comunicaciones (FCC) y está en acuerdo con las Partes 15 y 68 de las Regulaciones y Reglas de la FCC.

### 1 Notificación a la Compañía Telefónica Local

Al fondo de este equipo Ud. hallará un rótulo indicando, entre otra información, el número de la Registración con la FCC y el Número del Equivalente Timbre (REN) para este equipo. Ud. deberá, a petición, proveer esta información a su compañía telefónica.

El REN es útil para determinar el número total de artefactos que Ud. puede conectar a su línea telefónica, todavía asegurando que todos estos artefactos sonarán cuando se llame su número telefónico. En la mayoría de las áreas (pero no en todas), el total de los números REN de todos los artefactos conectados a una línea no debe exceder 5. Para estar seguro del número total de artefactos que Ud. pueda conectar a su línea (determinado por el REN), Ud. deberá ponerse en contacto con su compañía telefónica local.

### NOTAS:

- No se puede usar este equipo con un teléfono de previo pago proveido por la compañía telefónica.
- Las líneas compartidas son sujetas a las tarifas del estado, y por eso, es posible que Ud. no pueda usar su propio equipo telefónico si Ud. estuviera compartiendo la misma línea telefónica con otros abonados.
- Se debe notificar la compañía telefónica cuando se desconecte permanentemente su teléfono de la línea.


### 2 Derechos de la Compañía Telefónica

Si su equipo causa algún problema en su línea que pudiera dañar la red telefónica, la compañía telefónica siempre que sea posible le avisará de la posible interrupción temporal de su servicio. En caso que la compañía no pudiera avisarle al antemano y hubiera necesidad de tomar tal acción, la compañía telefónica podrá interrumpir su servicio inmediatamente. En caso de tal interrupción telefónica temporal la compañía debe: (1) darle aviso al momento de tal interrupción temporal de servicio, (2) concederle a Ud. la oportunidad de corregir la situación, (3) informarle a Ud. de sus derechos de presentar una queja a la Comisión de acuerdo con los procedimientos dictados en la Subparte E de la Parte 68 de las Regulaciones y Reglas de la FCC.

La compañía telefónica puede hacer los cambios en sus instalaciones de comunicación, en equipos, en sus funcionamientos o procedimientos que digne necesarios para el manejo de sus negocios y que no sean incompatibles con las Reglas y Regulaciones de la FCC. Si estos cambios pudieran alterar el uso o el funcionamiento de su equipo telefónico, la compañía telefónica deberá darle aviso adecuado en escrito para que Ud. goce de un servicio ininterrumpido.


## REQUERIMIENTOS PARA EL CONTACTO MODULAR

Usted necesita un contacto tipo modular RJ11C, que es el tipo de contacto más común de contacto telefónico y es como el contacto ilustrado aquí. Si usted no tiene un contacto modular, cheque con su compañía telefónica para preguntar cómo puede arreglar que se le instale uno.

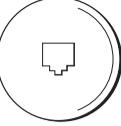


## INSTALACIÓN


### INSTALACIÓN EN SUPERFICIE PLANA

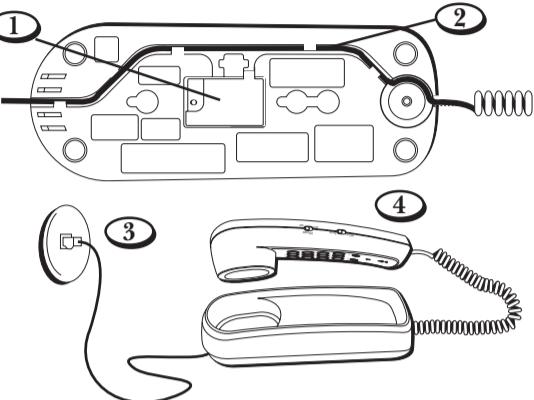


1. Saque el cable telefónico del bolsillo en la parte de abajo del teléfono.
2. Enhebre la línea a través de las ranuras en la parte de abajo del teléfono.
3. Conecte el cable a un contacto modular para teléfono.
4. Deslice el botón de timbre [Ringer] (en el costado del auricular) a la posición de encendido (On).
5. Seleccione la función del selector de Pulso/Tono [Pulse/Tone] a Tono [Tone] para servicio de teclas o Pulso [Pulse] para servicio con disco rotatorio. Si usted no sabe qué tipo de servicio tiene, cheque con su compañía telefónica.

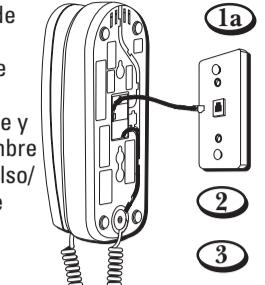

1a

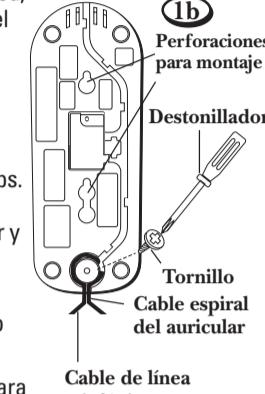

1b

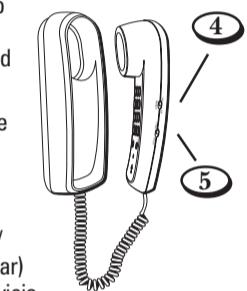

2

## INSTALACIÓN SOBRE PARED

1a. Si el contacto modular está en la placa de la base en donde usted montará el teléfono, solamente conecte el cable telefónico en el contacto; Monte el teléfono en la base y programe el selector de timbre (Ringer) y el selector de Pulso/Tono (Pulse/Tone) como se describe anteriormente.

1b. Si el contacto modular está cerca del suelo y usted desea montar el teléfono en la pared, saque el cable telefónico del bolsillo que está en la parte de abajo del aparato.

Desatornille la tapa circular del cable telefónico en la parte de abajo del teléfono con un desatornillador Philips. Enhebre el cable telefónico alrededor de la guía circular y vuelva a atornillar la tapa circular en su sitio.

2. Conecte el cable telefónico en el contacto modular.

3. Deslice las perforaciones para montaje en la parte de abajo del teléfono sobre la placa en la pared y deslice el teléfono hasta que el aparato esté colocado firmemente en su lugar (la placa de montaje sobre pared no está incluida).

4. Deslice el selector de timbre (Ringer) en el costado del aparato a la función de encendido (On).

5. Programe el selector de Pulso/Tono (en el costado del auricular) en la función de Tono para servicio de teclas o en Pulso para función de disco. Si usted no sabe qué tipo de servicio tiene, cheque con su compañía telefónica.

## GARANTÍA LIMITADA

### Su garantía cubre:

- Todo defecto de materiales o mano de obra

### Vigencia de la garantía:

- Un año a partir de la fecha de compra  
(El período de la garantía para los aparatos de alquiler comienza el primer día de alquiler 045 días a partir de la fecha de envío a la empresa de alquiler, cualquiera sea la fecha que cae primero.)

### Responsabilidad de la compañía:

- Brindarle un aparato nuevo o, si lo consideramos necesario, un aparato reacondicionado.
- El aparato que se entrega en este caso estará cubierto hasta que termine la garantía del aparato original.

### Reclamo por garantía:

- Embalar el aparato como corresponde, incluyendo los cables y otros accesorios que se suministraron con el producto. Recomendamos utilizar la caja y el material de embalaje que vinieron de fábrica.
- Colocar en el paquete una prueba de compra que contenga la fecha, como la factura. Además, escribir en letra de imprenta el nombre y la dirección del remitente y la descripción de la falla. Envíe el paquete por un servicio de mensajería corriente, como UPS u otro similar a la dirección siguiente:

Thomson Consumer Electronics, Inc.  
Product Exchange Center  
32B Spur Drive  
El Paso, Texas 79906

- Pagar todos los cargos que le cobre el Centro de Canjes por los servicios no cubiertos por la garantía.
- Asegure su envío contra pérdidas o daños, ya que en esos casos Thomson no acepta ninguna responsabilidad.
- Se le enviará un aparato nuevo o reacondicionado con porte pagado.

### Aspectos no cubiertos por la garantía:

- Instrucción a los clientes. (Su Manual de Instrucciones le brinda información sobre el funcionamiento del aparato y de los controles. Para más detalles, póngase en contacto con su representante).
- Instalación y ajustes de configuración
- Pilas
- Daños debidos al abuso o descuido.
- Productos que han sido modificados o incorporados en otros productos.
- Productos adquiridos o reparados fuera de los EE.UU.
- Casos fortuitos, como daños por descargas eléctricas, etc.

### Registro del producto:


- Sirvase completar y enviar la tarjeta de registro del producto, que viene con su aparato. El registro facilitará el contacto, si fuera necesario. El retorno de la tarjeta no se requiere para la aplicación de la garantía.

### Leyes estatales que se aplican a la garantía:

- Esta garantía cubre sus derechos legales específicos, pero es posible que usted tenga otros derechos si cambia de estado.

### En caso de comprar el producto fuera de los Estados Unidos:

- Esta garantía no se aplica. Solicite a su distribuidor información sobre la garantía.

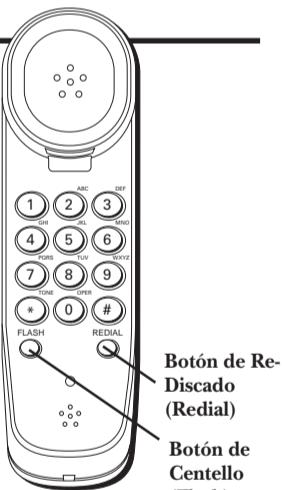

## USO DE LAS FUNCIONES DEL Teléfono

### RE-DISCADO AUTOMÁTICO

Para re-discar automáticamente el último número que usted marcó:

1. Levante el auricular para obtener tono de marcar.
2. Oprima el botón de re-discado (Redial).

### FUNCIÓN DE CENTELLO O SERVICIOS

Oprima el botón de Centello (Flash) en lugar del selector de gancho para activar las funciones de servicios especiales como llamada en espera o transferencia de llamadas. Estos servicios especiales son provistos por su compañía telefónica local.

### TONO TEMPORAL

Si usted tiene servicio para función de pulso (Pulse), usted puede cambiar temporalmente su servicio a función de tecla (Tone) para poder utilizar servicios que requieren las teclas para tener acceso a información o servicios (como obtener información del banco local). Después de discar el número telefónico, oprima y suelte el botón de Tono, marcado con un asterisco (\*). Cuando usted cuelgue, su teléfono regresará a la función de discado rotatorio.

### SERVICIO

La FCC requiere que este producto sea reparado únicamente por el fabricante o agentes de servicio autorizados. De acuerdo con los requerimientos de la FCC, el hacer cambios o modificaciones que no están expresamente autorizados por Thomson Consumer Electronics podría cancelar la autoridad del usuario para hacer uso de este aparato. Para instrucciones sobre cómo obtener servicio para el aparato, llame al 1-800-448-0329. Fije su recibo de compra al manual de instrucciones para futura referencia o anote la fecha y lugar en que este producto fué adquirido o recibido como regalo. Esta información será importante en caso de que se requiera servicio durante el período de garantía del producto.

Fecha de compra \_\_\_\_\_ Nombre de la tienda \_\_\_\_\_

## DETECCIÓN DE AVERÍAS

Problema	Solución
No hay tono de discado	• Cheque el selector de gancho para asegurarse de que es capaz de salir.
No se puede discar hacia afuera	• Asegúrese de que la función de Tono/Pulso está programada en la posición correcta.
El teléfono no timbra	• Asegúrese de que el botón de timbre (Ringer) está en la función de encendido (On).
Respuesta cuando se discá en función de Pulso (rotatorio)	• Esto es normal. El poder fluctúa cuando el teléfono está llamando.
La otra persona no le escucha	• Asegúrese de que el teléfono está adecuadamente conectado.
	• Asegúrese de que los otros teléfonos no están descolgados mientras usa el teléfono. Es normal que el volumen disminuya cuando teléfonos adicionales están descolgados al mismo tiempo.

COMPATIBILIDAD CON AUDÍFONOS  
Se juzga que este teléfono es compatible con audífonos, en base a las normas de la FCC.

El número de la FCC está ubicado en el fondo de la base  
El numero REN esta ubicado en el fondo de la base

## THOMSON CONSUMER ELECTRONICS

© 1998 Thomson Consumer Electronics, Inc. 2-9120/21/22/23/24/26/27  
P.O. BOX 1976, Indianapolis, IN 46206 2-9130/31/33/34/36/37  
Trademark(s) ® Registered 20909690 (Rev. 2 E/S)  
Marca(s) ® Registrada(s) 98-08

Impreso en las Filipinas